

## ACURA B1060: RELAY CONTROL MODULE LOST COMMUNICATION WITH GAUGE CONTROL MODULE (VPS/NE MESSAGE)

### OVERVIEW

Severity	:	<div><div>Medium</div></div>
DIY Difficulty Level	:	<div><div>Intermediate</div></div>
Repair Cost	:	\$75-\$200
Can I Still Drive?	:	Yes

### What Does The Acura B1060 Code Mean?

Poor communication between the Relay Control Module and the Gauge Control Module

### What Are The Potential Causes Of The Acura B1060 Code?

- Loose or poor connections between the Relay Control Module and the Gauge Control Module
- Blown fuse in the main under-hood fuse box
- Blown fuse in the under-dash fuse/relay box
- "Open" or "Short" to ground at Relay Control Module
- "Open" or "Short" to ground at Gauge Control Module
- Faulty Relay Control Module
- Faulty Gauge Control Module

### How Can You Fix The Acura B1060 Code?

- If DTCs [B1011](#), [B1032](#), B1060, [B1061](#), [B1205](#), [B1206](#), [B1207](#), [B1906](#), [B1956](#), [B2157](#), and [B2160](#) are indicated, perform the Gauge Control Module input test.

## Reference Sources

[Acura B1060](#), DTCDECODE.