

## What Does The Acura P1102 Code Mean?

**Condition for setting the DTC:** Engine started, vehicle driven at cruise speed and then back to idle speed, and the PCM detected the MAF sensor signal indicated less than 11.5 g/sec at some point during the CCM Rationality test.

## What Are The Potential Causes Of The Acura P1102 Code?

Below are some potential causes of this DTC:

- MAF sensor signal circuit is open (intermittent fault)
- MAF sensor signal circuit shorted to ground (intermittent fault)
- MAF sensor is damaged or dirty (it may be shorted internally)
- BARO sensor signal circuit to the TCM is open or grounded

## **Reference Sources**

Acura P1102, DTCDECODE.

