

What Does The Acura P1106 Code Mean?

DTC <u>P0121</u>, <u>P0122</u>, <u>P0123</u> not set, engine runtime 10 seconds, engine speed less than 1000 rpm with throttle angle less than 3%, or the engine speed is more than 1000 rpm with the throttle angle less than 10%, and the PCM detected an unexpected high value (o

What Are The Potential Causes Of The Acura P1106 Code?

- MAP sensor signal circuit is open (an intermittent fault)
- MAP sensor signal circuit is shorted to VREF (intermittent fault)
- MAP sensor is damaged or has failed

Reference Sources

2001 Engine Performance Acura Self-Diagnostics, MDX, 3.2CL & 3.2TL, page 34.

