

## ACURA P1122: THROTTLE POSITION SENSOR INTERMITTENT LOW INPUT

### OVERVIEW

Severity	:	<div><div>Medium</div></div>
DIY Difficulty Level	:	<div><div>Intermediate</div></div>
Repair Cost	:	\$200-\$600
Can I Still Drive?	:	<b>Yes</b> (Short-term only)

### What Does The Acura P1122 Code Mean?

Engine started, and the PCM detected an unexpected low signal of less than 0.22v on the TP sensor circuit for 0.15 seconds over a 1.5 second period during the CCM continuous test.

**Note:** For additional help with this code, view the Failure Records.

### What Are The Potential Causes Of The Acura P1122 Code?

Below are some potential causes of this DTC:

- TP sensor signal circuit is shorted to ground
- TP sensor VREF circuit shorted to ground (test other sensors)
- TP sensor is damaged or has failed

### Reference Sources

[Acura P1122](#), DTCDECODE.