

What Does The Acura P1366 Code Mean?

This code indicates that engine started, and the PCM detected an unexpected (intermittent) interruption of the Top Dead Center 2 (TDC2) sensor signal.

What Are The Potential Causes Of The Acura P1366 Code?

Below are some potential causes of this DTC:

- TDC2 signal circuit is open (intermittent signal)
- TDC2 signal circuit is shorted to ground (intermittent signal)
- TDC2 pickup assembly or its pulse rotor is damaged (intermittent signal)
- TDC2 is damaged or has failed (intermittent signal)
- PCM has failed

Reference Sources

Acura P1366, DTCDECODE.

