

## What Does The Acura P1498 Code Mean?

This code indicates the condition that key on or engine running; and the PCM detected the EGR Valve Lift sensor signal was more than an allowable range stored in memory.

## What Are The Potential Causes Of The Acura P1498 Code?

Below are some potential causes of this DTC:

- EGR valve lift sensor circuit is open or shorted to power
- EGR valve lift sensor is shorted to VREF or system power (B+)
- EGR valve lift sensor is stuck, damaged or has failed
- PCM has failed

## **Reference Sources**

2001 Engine Performance Acura Self-Diagnostics, MDX, 3.2CL & 3.2TL, pp.52-53.

