| ACURA P1640: OUTPUT DRIVER MODULE 'A' CIRCUIT MALFUNCTION | | |
|--|---|------------------------------|
| | | OVERVIEW |
| Severity | : | Medium |
| DIY Difficulty Level | : | Intermediate |
| Repair Cost | : | \$200-\$450 |
| Can I Still Drive? | : | Yes (Short-term only) |

What Does The Acura P1640 Code Mean?

Condition for setting the DTC: DTC <u>P1618</u> not set, engine started, engine running, system voltage over 13.2v for 4 seconds, and the PCM detected an open circuit condition and an unexpected high voltage condition on the Output Driver Module circuit (A/C Clutch Relay or Purge Solenoid).

What Are The Potential Causes Of The Acura P1640 Code?

Below are some potential causes of this DTC:

- One or more output device driver circuits connected to ODM 'A' has an open circuit condition
- One or more output device driver circuits connected to ODM 'A' has a short-to-voltage condition
- Check for an open power circuit to the related output device

Reference Sources

Acura P1640, DTCDECODE.

