

What Does The Acura P1659 Code Mean?

Ignition switch ON (II), battery voltage 10 volts minimum and DTCs <u>P0122</u>, <u>P0123</u>, <u>P0222</u>, <u>P0223</u>, <u>P2101</u>, <u>P2118</u>, <u>P2122</u>, <u>P2123</u>, <u>P2127</u>, <u>P2128</u>, <u>P2135</u>, <u>P2138</u>, <u>P2136</u> are not active. The voltage is not applied from the throttle actuator controller relay for at least 200 milliseconds. The execution time is once per driving cycle.

NOTE: Before you troubleshoot, record all freeze data and any on-board snapshot.

What Are The Potential Causes Of The Acura P1659 Code?

- Blown fuse
- Poor connections or loose terminals at the under-hood fuse/relay box (ETCS control relay)
 and the PCM
- "Open" or "Short" in the wire between the PCM and the under-hood fuse/relay box
- Faulty right side engine compartment wire harness
- Faulty relay control module (under-hood fuse/relay box)
- PCM needs to be updated with the latest software
- Faulty PCM



Reference Sources

Acura P1659, DTCDECODE.

