

ACURA P1684: THROTTLE VALVE RETURN SPRING PERFORMANCE PROBLEM

OVERVIEW

Severity	:	High
DIY Difficulty Level	:	Advanced
Repair Cost	:	\$300-\$850
Can I Still Drive?	:	No

What Does The Acura P1684 Code Mean?

Ignition switch LOCK (0), coolant temperature minimum 158 °F (70 °C), battery voltage minimum 6 volts and DTCs [P0117](#), [P0118](#), [P0122](#), [P0123](#), [P0222](#), [P0223](#), [P2101](#), [P2118](#), [P2122](#), [P2123](#), [P2127](#), [P2128](#), [P2135](#), [P2138](#), [P2176](#) not active.

The throttle valve opening angle is 17 ° or more, or 11 ° or less, for at least 3 seconds. Before you troubleshoot, record all freeze data and any on-board snapshot.

What Are The Potential Causes Of The Acura P1684 Code?

- Poor connections or loose terminals at the throttle body and the PCM
- Faulty throttle body

Reference Sources

[Acura P1684](#), DTCDECODE.