INPUT		
		OVERVIEW
Severity	:	Medium
DIY Difficulty Level	:	Intermediate
Repair Cost	:	\$170-\$250
Can I Still Drive?	:	Yes (Short-term only)

## What Does The Acura P1835 Code Mean?

## **Condition for setting the DTC:**

DTC <u>P0122</u> and <u>P0123</u> not set, engine started, engine running, throttle position less than 70%, and the PCM detected the Kick Down Switch remained in "on" position during the CCM test.

**Note:** For additional help with this code, view the Failure Records.

## What Are The Potential Causes Of The Acura P1835 Code?

Below are some potential causes of this DTC:

- Kick down switch signal circuit is shorted to ground
- Kick down switch ground circuit open between switch & ground
- Kick down switch is damaged, out-of-adjustment or has failed
- PCM has failed

## **Reference Sources**

Acura P1835, DTCDECODE.

