

What Does The Audi P1110 Code Mean?

Condition for setting the DTC:

Engine started, battery voltage must be at least 11.5v, all electrical components must be off, the ground between the engine and the chassis must be well connected, the exhaust system must be properly sealed between the catalytic converter and the cylinder.

What Are The Potential Causes Of The Audi P1110 Code?

Below are some potential causes of this DTC:

- Oxygen sensor (before catalytic converter) is faulty
- Oxygen sensor (behind catalytic converter) is faulty
- Oxygen sensor heater (before catalytic converter) is faulty
- Oxygen sensor heater (behind catalytic converter) is faulty
- Circuit wiring issues

Reference Sources

Audi P1110, DTCDECODE.

