

What Does The Audi P1130 Code Mean?

Condition for setting the DTC: Engine started, battery voltage must be at least 11.5v, all electrical components must be off, the ground between the engine and the chassis must be well connected, the exhaust system must be properly sealed between the catalytic converter and the cylinder.

What Are The Potential Causes Of The Audi P1130 Code?

Below are some potential causes of this DTC:

- Air intake system leaking, vacuum hoses leaking or damaged
- Air leaks located after the MAF sensor mounting location
- · EGR valve sticking, EGR diagram leaking, or gasket leaking
- EVAP vapor recovery system has failed
- Excessive fuel pressure

Reference Sources

- Audi of Ameria, 2002, <u>Technical Service Bulletin Diagnosis of Driveability Complaints on Turbo Charged Engines</u>.
- Audi of Ameria, 2013, Technical Service Bulletin.
- Audi of Ameria, 2015, <u>Technical Service Bulletin</u>.
- Audi of Ameria, 2020, Technical Service Bulletin.
- Audi of Ameria, 2020, Technical Service Bulletin.

