

## AUDI P1395: IGNITION COIL POWER OUTPUT STAGE 3 ELECTRICAL MALFUNCTION

### OVERVIEW

|                      |   |                                    |
|----------------------|---|------------------------------------|
| Severity             | : | <div><div>High</div></div>         |
| DIY Difficulty Level | : | <div><div>Intermediate</div></div> |
| Repair Cost          | : | \$150-\$300                        |
| Can I Still Drive?   | : | No                                 |

### What Does The Audi P1395 Code Mean?

Condition for setting the DTC:

Key on or engine started, battery voltage at least 11.5v, all electrical components off, ground connections between engine and chassis well connected, parking brake must be engaged (to keep daytime driving lights off), automatic transmission selector must be engaged.

### What Are The Potential Causes Of The Audi P1395 Code?

Below are some potential causes of this DTC:

- Fuel pump relay faulty
- Camshaft position sensor has failed
- Engine speed sensor has failed
- Circuit wires have shorted to ground or are open
- Ignition coils with power output stages are faulty
- ECM has failed

### Reference Sources

[Audi P1395](#), DTCDECODE.