

AUDI P1626: DATA-BUS DRIVE TRAIN MISSING MESSAGE FROM TRANSMISSION CONTROL MODULE

OVERVIEW

Severity	:	Medium
DIY Difficulty Level	:	Intermediate
Repair Cost	:	\$75-\$150
Can I Still Drive?	:	Yes

What Does The Audi P1626 Code Mean?

After engine has been started. Time since start->1 sec. Battery voltage->10.54 V. Initialize failure and/or no acknowledge.

What Are The Potential Causes Of The Audi P1626 Code?

- Fuse
- Faulty CAN-Bus Terminal Resistance, TCM to ECM
- Wiring connection for an open circuit, short circuit to Battery (+) or Ground (GND).
- Wiring connection for damage, corrosion, loose or broken terminals.
- Transmission Control Module (TCM)
- Engine Control Module (ECM)

Reference Sources

[Audi A4 Avant 95-01 Service Repair Manual](#), page 60.