

## What Does The BMW P1025 Code Mean?

With the engine running, no travel limit has been initialized. Check the installation and the mechanical components for wear. This fault is because the system is operated for the first time with a new VVT-SG as there is no automatic limit initialization.

## What Are The Potential Causes Of The BMW P1025 Code?

Conduct travel limit initialization.

## Reference Sources

[BMW P1025](#), DTCDECODE.