

What Does The BMW P1027 Code Mean?

With the engine running, the fault is an out of range adjustment for the self-learning function of the VVT at the lower range. Check the installation and the mechanical components for wear.

What Are The Potential Causes Of The BMW P1027 Code?

- Stuck at upper travel limit
- Defective sensor (magnet missing)
- Travel limit worn or deformed
- Wear in idler lever
- Torque compensation spring missing or not connected

Reference Sources

[BMW P1027](#), DTCDECODE.