

## What Does The BMW P1028 Code Mean?

With the engine running, no travel limit has been initialized. Check the sensor installation and the mechanical components for wear. This fault is because the system is operated for the first time with a new VVT-SG as there is no automatic limit initializ

## What Are The Potential Causes Of The BMW P1028 Code?

Conduct travel limit initialization.

## Reference Sources

[BMW P1028](#), DTCDECODE.