

What Does The BMW P1064 Code Mean?

After 500ms the difference between the deactivation and the starting positions exceeds specification. Usually occurs after repairs.

What Are The Potential Causes Of The BMW P1064 Code?

Turn off ignition and wait until the HR releases. Turn on the ignition and the VVT will initialize automatically.

Reference Sources

[BMW P1064](#), DTCDECODE.