CONTINUITY-OPEN LOAD				
		OVERVIEW		
Severity	:		Medium	
DIY Difficulty Level	:			Advanced
Repair Cost	:	\$120-\$500		

## What Does The BMW P1504 Code Mean?

Engine running the DME detected that the idle air control valve signal was intermittent.

## What Are The Potential Causes Of The BMW P1504 Code?

- Fuel delivery unit connector is loose or not attached
- Fuse 18 cause a short to the transfer fuel pump or the O2S
- Fuel pump has failed
- Fuel pump relay circuit is shorted to ground, B+ or is open
- Fuel Pump (FP) Relay not activated

## **Reference Sources**

BMW P1504, DTCDECODE.

