

BMW P1680: ELECTRONIC THROTTLE CONTROL MONITOR LEVEL 2/3 ADC PROCESSOR FAULT

OVERVIEW

Severity	:	<div><div>Medium</div></div>
DIY Difficulty Level	:	<div><div>Intermediate</div></div>
Repair Cost	:	\$50-\$200
Can I Still Drive?	:	Yes (Short-term only)

What Does The BMW P1680 Code Mean?

Key on, engine running to at least 1200rpm, the DME has detected an internal fault in the computer or internal fault in the control modules.

What Are The Potential Causes Of The BMW P1680 Code?

Below are some potential causes of this DTC:

- Battery terminal corrosion, loose battery connection, or faulty
- Connection to the DME interrupted, or the circuit has been opened
- Reprogramming error has occurred

Reference Sources

[BMW P1680](#), DTCDECODE.