

## What Does The BMW P1802 Code Mean?

The signal to/from the pressure regulator valve is interrupted or short circuited to ground.

## What Are The Potential Causes Of The BMW P1802 Code?

- Pressure control solenoid circuit is shorting to ground
- Pressure control solenoid circuit is open
- Valve has failed
- TCM has failed

## **Reference Sources**

BMW P1802, DTCDECODE.