

BMW P1832: PRESSURE REGULATOR VALVE 2 UPPER THRESHOLD

OVERVIEW

Severity	:	High
DIY Difficulty Level	:	Intermediate
Repair Cost	:	\$75-\$450
Can I Still Drive?	:	Yes (Short-term only)

What Does The BMW P1832 Code Mean?

The signal to/from the pressure regulator valve is interrupted or short circuited to supply.

What Are The Potential Causes Of The BMW P1832 Code?

Below are some potential causes of this DTC:

- Pressure control solenoid circuit is shorting to ground
- Pressure control solenoid circuit is open
- Valve has failed
- TCM has failed

Reference Sources

[BMW P1832](#), DTCDECODE.