

What Does The BMW P3022 Code Mean?

Engine started and the fault entry trips after the criterion remains present for 2 seconds, battery voltage must be at least 11v, and there is a communications fault between the ECU and the CJ125 (SPI bus) chip.

What Are The Potential Causes Of The BMW P3022 Code?

- Internal HW fault in control module
- Replace control module

Reference Sources

Mitchell Repair Information Company, LLC, 2014, [Self Diagnosis - Trouble Codes \(M57\)](#), page 11.