

What Does The BMW P3023 Code Mean?

Engine started and the fault entry trips after the criterion remains present for 2 seconds, battery voltage must be at least 11v, and there is a communications fault between the ECU and the CJ125 (SPI bus) chip.

What Are The Potential Causes Of The BMW P3023 Code?

Below are some potential causes of this DTC:

- Internal HW fault in control module
- Replace control module

Reference Sources

[BMW P3023](#), DTCDECODE.