

What Does The BMW P3233 Code Mean?

Key on, engine running to at least 1200rpm, the DME has detected an internal fault in the computer or internal fault in the control modules.

What Are The Potential Causes Of The BMW P3233 Code?

Below are some potential causes of this DTC:

- Battery terminal corrosion, loose battery connection, or faulty
- Connection to the DME interrupted, or the circuit has been opened
- Reprogramming error has occurred

Reference Sources

BMW P3233, DTCDECODE.

