

## What Does The Cadillac C128B Code Mean?

Condition for setting the DTC: The ignition is ON. Ignition voltage is greater than 10 volts. The brake pedal is not applied.

## What Are The Potential Causes Of The Cadillac C128B Code?

Below are some potential causes of this DTC:

- Internal sensor failure is detected
- Improper relearn performed
- A short to battery is detected on the sensor signal circuit.
- A short to ground or open is detected signal circuit.
- Signal is erratic and changes faster than physically allowed.

## **Reference Sources**

Cadillac C128B, DTCDECODE.

