

What Does The Cadillac P1520 Code Mean?

DTC <u>P0502</u> or <u>P0503</u> not set, Engine started; and the PCM detected the Transaxle Range (TR) switch indicated an illegal combination, or with DTC <u>P1810</u> diagnostic passed and the engine running, that the TR switch signal did not match the correct signal combi

What Are The Potential Causes Of The Cadillac P1520 Code?

- One or more TR switch circuits is open or shorted to ground
- One or more TR switch circuits is shorted to VREF or B+
- One or more TR switch circuits is shorted together
- TR switch is out of adjustment, damaged or it has failed
- PCM has failed

Reference Sources

GM, 2013, Service Bullettin - Prior To Any Circuit Testing.

