| CADILLAC P1632: THEFT DETERRENT FUEL DISABLE SIGNAL RECEIVED | | |
|--|---|-------------|
| | | OVERVIEW |
| Severity | : | Medium |
| DIY Difficulty Level | : | Advanced |
| Repair Cost | : | \$130-\$480 |
| Can I Still Drive? | : | Yes |

What Does The Cadillac P1632 Code Mean?

Conditions for Setting the DTC. Test Condition Vehicle Theft Deterrent system enabled. Failure Condition Fuel disable password received.

How Can You Fix The Cadillac P1632 Code?

If DTC P1632 is set the IPC has received the incorrect resistance value or an unrecognizable resistance value from the Ignition Key, check the Ignition Key to make sure that it is the correct key for that vehicle and it is clean and dry.

Reference Sources

GM, 2013, Service Bullettin - Prior To Any Circuit Testing.

