

CADILLAC P1876: UP AND DOWN SHIFT ENABLE SWITCH CIRCUIT LOW VOLTAGE

OVERVIEW

Severity	:	<div>High</div>
DIY Difficulty Level	:	<div>Intermediate</div>
Repair Cost	:	\$150-\$200
Can I Still Drive?	:	Yes

What Does The Cadillac P1876 Code Mean?

The ignition voltage is 8.6 volts or greater. The engine speed is 400 RPM or greater for 5 seconds.

What Are The Potential Causes Of The Cadillac P1876 Code?

The BCM detects a TAP Enable Switch request 3 times when not in M (D6) range for 2 seconds.

Reference Sources

[Cadillac P1876](#), DTCDECODE.