

CADILLAC P1A88: 42 VOLT SYSTEM PERFORMANCE

OVERVIEW

| | | |
|----------------------|---|------------------------------------|
| Severity | : | <div><div>Medium</div></div> |
| DIY Difficulty Level | : | <div><div>Intermediate</div></div> |
| Repair Cost | : | \$80-\$150 |
| Can I Still Drive? | : | Yes |

What Does The Cadillac P1A88 Code Mean?

Ignition voltage is 7 V and no more than 16 V. The accessory DC power control module runs a portion of the diagnostics for this DTC at Accessory/Ignition On. The accessory DC power control module runs additional diagnostics when the 42 volt output is commanded on.

What Are The Potential Causes Of The Cadillac P1A88 Code?

- An external condition has caused an accessory DC power control module 42 volt malfunction
- The accessory DC power control module has detected an internal malfunction.

Reference Sources

[Cadillac P1A88](#), DTCDECODE.