

CHEVROLET B1428: IGNITION SWITCHED POWER RUN/CRANK RELAY CIRCUIT

OVERVIEW

Severity	:	<div><div>High</div></div>
DIY Difficulty Level	:	<div><div>Intermediate</div></div>
Repair Cost	:	\$50-\$100
Can I Still Drive?	:	No

What Does The Chevrolet B1428 Code Mean?

The system voltage is between 9-16 volts. The DTC can only run when the output is activated.

What Are The Potential Causes Of The Chevrolet B1428 Code?

The BCM detects a short to ground in the run/crank relay coil control circuit.

Reference Sources

GM, 2015, [Service Bulletin](#) - Intermittent ABS Codes, No Communications, No Start and/or Various Electrical Concerns.