

CHEVROLET B2722: TRANS PREFERENCE SWITCH CIRCUIT LOW

OVERVIEW

Severity	:	Medium
DIY Difficulty Level	:	Intermediate
Repair Cost	:	\$75-\$200
Can I Still Drive?	:	Yes (Short-term only)

What Does The Chevrolet B2722 Code Mean?

Conditions for setting the DTC:

- The battery voltage must be between 9.0 and 16.0 volts.
- Ignition switch in the RUN position.
- The Tow/Haul switch must be activated.

How Can You Fix The Chevrolet B2722 Code?

- Perform a visual inspection for loose or poor connections at all related components.
- Refer to Testing for Intermittent and Poor Connections in Wiring Systems.

Reference Sources

[Chevrolet B2722](#), DTCDECODE.