

What Does The Chevrolet P1183 Code Mean?

The ignition is ON, or the engine is running. The ignition is ON. OR The TP Indicated Angle parameter is more than 0 percent, when the engine speed is less than 1100 RPM.

Reference Sources

Chevrolet P1183, DTCDECODE.

