


CHEVROLET P166B: INTAKE AIR (IA) HEATER OVER TEMPERATURE

OVERVIEW

Severity	:	 High
DIY Difficulty Level	:	 Advanced
Repair Cost	:	\$300-\$500
Can I Still Drive?	:	No

What Does The Chevrolet P166B Code Mean?

Conditions for setting the DTC:

- The intake air heater is commanded ON The engine is running for more than 40 seconds.
- Engine coolant temperature is less than 60°C (140°F).
- Battery voltage is between 9-16 V.
- The IAH temperature is more than 80°C (176°F) for more than 3 seconds.

Reference Sources

[Chevrolet P166B](#), DTCDECODE.