

What Does The Chevrolet P1B76 Code Mean?

This DTC is set when voltage is detected below threshold.

Conditions for setting the DTC:

- The battery energy control module is awake and communicating.
- Ignition in ON/RUN.
- Vehicle speed is greater than 0.
- There is a change in the Voltage and Current readings.

What Are The Potential Causes Of The Chevrolet P1B76 Code?

- Battery Circuit: The battery energy control module detects high resistance on the circuit.
- Circuit Performance: The faulted cell group does not change voltage.
- Low Voltage: Any hybrid/EV battery voltage signal is less than 0.2 V.
- High Voltage: Any hybrid/EV battery voltage signal is greater than 4.8 V.

Reference Sources

<u>Chevrolet Volt Hybrid DTC</u> - OBDG01 HYBRID Diagnostics Document, page 613.

