BCM OVERVIEW		
DIY Difficulty Level	:	Intermediate
Repair Cost	:	\$75-\$200
Can I Still Drive?	:	Yes

What Does The Chevrolet U1064 Code Mean?

Conditions for Setting the DTC. The voltage supplied to the module is in the normal operating range (approximately 9-16 volts). DTC <u>U1300</u> and DTC <u>U1301</u> do not have a current status. The vehicle power mode (ignition switch position) requires se

Reference Sources

Chevrolet U1064, DTCDECODE.

