

CHRYSLER B1BD0: ROLL OVER INTERNAL

OVERVIEW

Severity	:	<div><div>Medium</div></div>
DIY Difficulty Level	:	<div><div>Intermediate</div></div>
Repair Cost	:	\$40-\$200
Can I Still Drive?	:	Yes

What Does The Chrysler B1BD0 Code Mean?

The ORC checks the status of the internal roll over sensor continuously through the ignition cycle. This DTC sets when the ORC detects corruption in the data and circuitry related to the internal roll over sensor. Once set, this DTC is latched for the entire ignition cycle. If the failure is detected in two consecutive power cycles, the DTC is set indefinitely.

What Are The Potential Causes Of The Chrysler B1BD0 Code?

Occupant restraint controller (ORC)

Reference Sources

[Chrysler B1BD0](#), DTCDECODE.