

FORD B1318: BATTERY VOLTAGE LOW

OVERVIEW

Severity	:	Low
DIY Difficulty Level	:	Beginner
Repair Cost	:	\$100-\$350
Can I Still Drive?	:	Yes

What Does The Ford B1318 Code Mean?

The DSM continuously monitors the input voltage for correct operation. If the DSM detects input voltage below 11 volts, it stores DTC B1318 in memory. If DTC B1318 is set, the DSM disables the memory system outputs for the driver seat memory operation.

Reference Sources

[Pinpoint Test G - 2006 Escape](#)