

FORD P1112: INTAKE AIR TEMPERATURE CIRCUIT INTERMITTENT

OVERVIEW

Severity	:	<div><div>Medium</div></div>
DIY Difficulty Level	:	<div><div>Intermediate</div></div>
Repair Cost	:	\$90-\$1000
Can I Still Drive?	:	

What Does The Ford P1112 Code Mean?

This DTC sets when the intake air temperature (IAT) sensor signal is intermittent.

What Are The Potential Causes Of The Ford P1112 Code?

- IAT circuit intermittent open
- IAT circuit intermittent short to voltage
- IAT circuit intermittent short to ground
- Damaged IAT sensor
- Damaged harness connector
- Damaged harness

Reference Sources

[2007 Powertrain Control Emissions Diagnosis On Board Diagnosis](#) - Sections 4: Powertrain DTC Charts and Descriptions, P1112, pages 87-88.