FORD P1140: WATER IN FUEL CONDITION			
		OVERVIEW	
Severity	:	Medium	
DIY Difficulty Level	:	Intermediate	
Repair Cost	:	\$50-\$100	
Can I Still Drive?	:	Yes	

What Does The Ford P1140 Code Mean?

The water in fuel (WIF) sensor is monitored by the PCM. This DTC sets when the PCM detects water in the fuel, and the WIF indicator lamp is illuminated.

What Are The Potential Causes Of The Ford P1140 Code?

- Water in fuel condition
- WIF circuit short to ground
- Damaged WIF sensor

Reference Sources

Technical Service Bulletin - 2017-1018 F-Super Duty