BUT LOW		
		OVERVIEW
Severity	:	Medium
DIY Difficulty Level	:	Intermediate
Repair Cost	:	\$287-\$320
Can I Still Drive?	:	Yes

## What Does The Ford P1168 Code Mean?

DTC <u>P0230</u>, <u>P0231</u> and <u>P0232</u> not set, Engine started; and the PCM detected the FRP sensor signal was less than the normal self-test range for these operating conditions.

**Note**: A FRP PID value below 551 kPa (80 psi) indicates a failure.

## What Are The Potential Causes Of The Ford P1168 Code?

- Low fuel level or the vehicle is out of fuel
- Low fuel pressure
- FRP sensor is damaged
- FRP sensor signal circuit has a high resistance condition

## **Reference Sources**

Ford P1168, DTCDECODE.

