

What Does The Ford P1625 Code Mean?

Key off, disconnect VLCM, check connector for damaged pins or corrosion, connect negative lead of DVOM to battery negative terminal, and measure voltage at pins 4 and 5 of VLCM harness connector.

Reference Sources

[Ford P1625](#), DTCDECODE.