FORD U300C: IGNITION INPUT OFF/ON/START		
OVERVIEW		
:	Medium	
:	Intermediate	
:	\$0-\$150	
:	Yes (Short-term only)	
	: :	

What Does The Ford U300C Code Mean?

The PCM monitors the ignition key state. This DTC sets when the key state is not available.

What Are The Potential Causes Of The Ford U300C Code?

- ISP-R circuit open
- ISP-R circuit short to ground

Reference Sources

Ford U300C, DTCDECODE.