

GMC U1128: LOST COMMUNICATIONS WITH RADIO

OVERVIEW

Severity	:	Medium
DIY Difficulty Level	:	Intermediate
Repair Cost	:	\$75-\$200
Can I Still Drive?	:	Yes (Short-term only)

What Does The GMC U1128 Code Mean?

Condition for setting the codes: Battery Voltage is 9-16 volts. DTCs [U1300](#), [U1301](#), or U1305 are not current. The vehicle power mode requires serial data communication to occur.

What Are The Potential Causes Of The GMC U1128 Code?

- An intermittent open between a module and a star connector
- A poor connection at a module or a star connector
- An intermittent open in a star connector
- An open voltage or ground circuit

Reference Sources

[GMC U1128](#), DTCDECODE.