

## HONDA B10CF: LEFT DAYTIME RUNNING LIGHTS CIRCUIT MALFUNCTION

### OVERVIEW

Severity	:	<div><div>Medium</div></div>
DIY Difficulty Level	:	<div><div>Intermediate</div></div>
Repair Cost	:	<b>\$100-\$300</b>
Can I Still Drive?	:	<b>Yes</b> (Short-term only)

### What Does The Honda B10CF Code Mean?

This code indicates inoperative or intermittent operation of the left daytime running lights.

**NOTE:** If you are troubleshooting multiple DTCs, be sure to follow the instructions in B-CAN System Diagnosis Test Mode A. Make sure the fuse in the driver's under-dash fuse/relay box is OK.

### What Are The Potential Causes Of The Honda B10CF Code?

- Loose or poor connections driver's under-dash fuse/relay box and left daytime running light
- "Open" or "Short" " circuit between driver's under-dash fuse/relay box and left daytime running light
- "Open" or high resistance between left daytime running light and body ground
- Faulty driver's MICU

### Reference Sources

[DTC Troubleshooting](#) - 2009 Honda Accord L4-2.4L