

## What Does The Honda B1575 Code Mean?

Poor communication between the Automatic Lighting Sensor and the MICU.

**NOTE:** If you are troubleshooting multiple DTCs, be sure to follow the instructions in B-CAN System Diagnosis Test Mode A.

## What Are The Potential Causes Of The Honda B1575 Code?

- Loose or poor connections between the Automatic Lighting Sensor and the MICU
- "Open" or "Short" Automatic Lighting Sensor and the MICU
- FaultyAutomatic Lighting Sensor
- Faulty under-dash fuse/relay box (MICU)

## **Reference Sources**

Honda B1575, DTCDECODE.

