

HONDA P16BD: STARTER CUT RELAY 2 MALFUNCTION

OVERVIEW

Severity	:	<div><div>Medium</div></div>
DIY Difficulty Level	:	<div><div>Intermediate</div></div>
Repair Cost	:	\$50-\$150
Can I Still Drive?	:	Yes

What Does The Honda P16BD Code Mean?

Engine running, starter switch OFF, DTC P16BE not active. The terminal voltage of the STRLD drops to 2.2 V for at least 5 seconds when the starter cut relay output is turned off.

NOTE: Before you troubleshoot, record all freeze data and any on-board snapshot.

What Are The Potential Causes Of The Honda P16BD Code?

- Poor connections or loose terminals at starter cut relay 2 and the PCM
- Faulty starter relay 2

Reference Sources

[2009-2010 Honda Pilot Service Manual for P16BD](#) - Honda Motor Co., Ltd, pages 474-476.