

INFINITI C1116: STOP LAMP SWITCH

OVERVIEW

Severity	:	<div><div>Medium</div></div>
DIY Difficulty Level	:	<div><div>Intermediate</div></div>
Repair Cost	:	\$50-\$150
Can I Still Drive?	:	Yes (Short-term only)

What Does The Infiniti C1116 Code Mean?

When a stop lamp switch signal is not input where the brake pedal is depressed.

What Are The Potential Causes Of The Infiniti C1116 Code?

- Harness or connector
- Stop lamp switch
- ABS actuator and electric unit (control unit)
- Battery power supply system

Reference Sources

[Brake Control System Repair Information for C1116](#) - 2008 Infiniti FX35/FX45, page 27.