

MAZDA B12AB: DRIVERS HEATED SEAT RELAY DRIVE CIRCUIT SHORTED TO BATTERY VOLTAGE

OVERVIEW

Severity	:	<div><div>Medium</div></div>
DIY Difficulty Level	:	<div><div>Intermediate</div></div>
Repair Cost	:	\$250-\$350
Can I Still Drive?	:	Yes (Short-term only)

What Does The Mazda B12AB Code Mean?

The driver's seat heated relay drive circuit is shorted to battery voltage. The heated seat is inoperative or does not operate correctly. If the driver heated seat relay drive circuit is shorted to voltage and the HVAC module attempts to activate the driver heated seat relay, the DTC will set and the seat will fail to heat or intermittently heat.

What Are The Potential Causes Of The Mazda B12AB Code?

- Wiring, terminals or connectors
- Heated seat relay
- Heated seat element
- HVAC module

Reference Sources

[Mazda B12AB](#), DTCDECODE.