

## MAZDA B12AC: DRIVERS HEATED SEAT RELAY DRIVE CIRCUIT OPEN OR SHORTED TO GROUND

### OVERVIEW

Severity	:	<div><div>Medium</div></div>
DIY Difficulty Level	:	<div><div>Intermediate</div></div>
Repair Cost	:	\$250-\$350
Can I Still Drive?	:	<b>Yes</b> (Short-term only)

### What Does The Mazda B12AC Code Mean?

If the driver heated seat relay drive circuit is open or shorted to ground and the HVAC module attempts to activate the driver heated seat relay, the DTC will set and the seat will fail to heat or intermittently heat.

### What Are The Potential Causes Of The Mazda B12AC Code?

- Wiring, terminals or connectors
- Heated seat relay
- Heated seat element
- HVAC module

### Reference Sources

[Mazda B12AC](#), DTCDECODE.